

**№ 332**

---

**EN VACUUM CLEANER**

Instruction manual

---



***CARRERA***

---

DESIGNED IN GERMANY

[www.carrera.de](http://www.carrera.de)

## **Thank you.**

For having placed your trust in CARRERA and for giving us the opportunity to prove you right with our vacuum cleaner.

## **Everything is driven by one idea.**

Each CARRERA appliance follows a clear concept.

We create technology maximizing user friendliness, handling and aesthetics and bringing performance to life. Performance is not just delivered by the motor alone, but results from the skillful interplay of each individual component. You will love our vacuum cleaner from the moment you switch it on.

We call it the **CARRERA** boost.

We have not reinvented the wheel, but we had the courage to do right what is crucial and to dispense with everything that is unimportant.

That is our style. And you will rediscover it in every **CARRERA** appliance.

---

# CONTENTS


---

01	Scope of Delivery/Appliance Parts	1
02	Safety Instructions	2
03	Intended Use	4
04	Before Use	4
05	Operation	6
06	Cleaning and Maintenance	7
07	Troubleshooting	9
08	Technical Data	10
09	Transport and Storage	11
10	Disposal	11
11	Warranty	12
12	Additional Information	13

# 01 SCOPE OF DELIVERY/APPLIANCE PARTS

---

- 1 Floor brush
- 2 Telescopic tube regulator
- 3 Telescopic tube
- 4 Air slide
- 5 Hose
- 6 Suction hose connection
- 7 Dust cup handle
- 8 Dust cup
- 9 On/off switch button and speed control
- 10 Automatic cord rewind
- 11 Air outlet plate

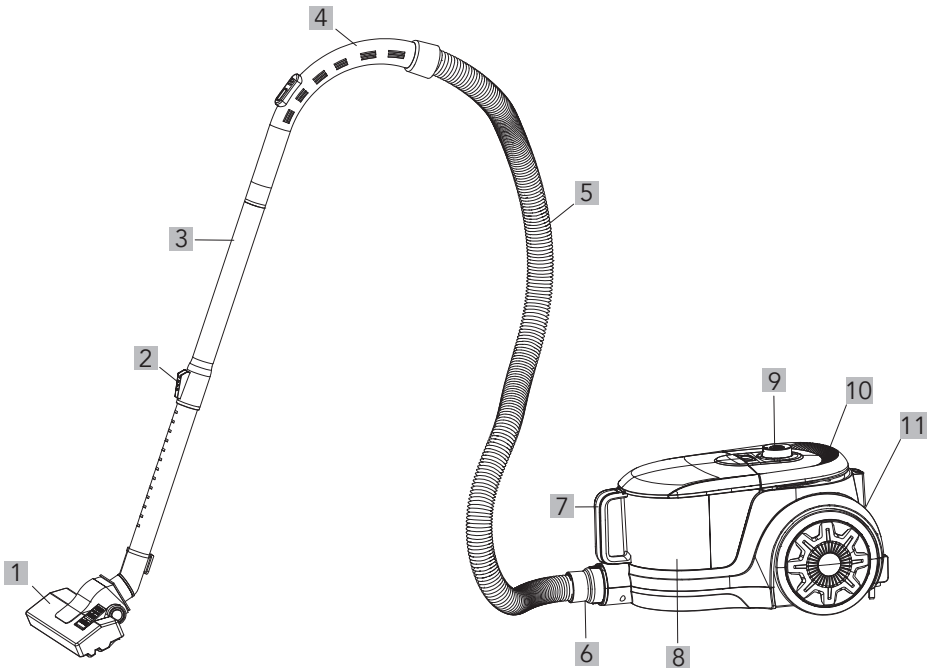

## 02 SAFETY INSTRUCTION

---

- Before use, inspect the appliance and make sure that there is no mechanical damage to the appliance and the power cord. Do not use the appliance if any damage is found.
- Before use, make sure that the operating voltage of the appliance corresponds to the mains voltage. Connect the device only to the AC power supply (~).
- Do not use the appliance if it fell. The appliance must be checked by a qualified specialist before it is used again.
- If the power cord is damaged, it must be replaced by the manufacturer, the service department or similarly qualified personnel to avoid danger.
- The appliance is intended solely for domestic use. Prolonged use for commercial purposes may overload the appliance, resulting in damage to the appliance or injury to persons.
- Do not use the appliance for purposes other than those for which it is intended.
- Do not leave the appliance unattended when it is switched on. Keep the appliance out of children's reach. Do not allow children to play with the appliance, the box and other packaging to avoid injury or suffocation.
- Do not use the appliance with accessories not included in the scope of
- Do not use the appliance outdoors or on wet surfaces.
- Protect the appliance and the power cord from high temperatures, direct sunlight, dampness and other adverse effects.
- Do not immerse the appliance in water or other liquids or touch it with wet hands. If the appliance gets wet, unplug it immediately.
- Do not pull or attempt to carry the appliance by the power cord. Make sure that the appliance does not run over the power cord.
- When unplugging the appliance, hold the plug and do not pull on the cable.
- Always disconnect the appliance from the mains before assembly, disassembly and cleaning.
- Do not attempt to disassemble or repair the appliance yourself: technical problems that may arise as a result of such actions are not covered by the warranty. Repairs should only be carried out by qualified service personnel.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to prevent them from playing with the appliance.
- Do not use the appliance to clean hard or sharp objects such as glass, nails, screws, coins.
- Do not use the appliance to pick up burning or smoking cigarettes, matches, smoldering ashes, fine dust (e.g. from plaster, concrete, flour or ashes), or toner particles from printers, copiers, etc.
- Do not use the appliance to collect explosive or flammable liquids. Do not use the appliance in places where such liquids are stored.
- Do not attempt to clean pets with the appliance.
- Do not bring the nozzle or tube too close to your body or face.
- Keep the appliance away from microwaves, heaters, fireplaces and stoves.
- Keep hair, loose clothing, fingers or other body parts away from the air inlets of the appliance.
- Before cleaning, remove any sharp or large objects from the floor that could damage the appliance.
- Do not use the appliance if:
  - the dust cup is not installed or is not assembled correctly;
  - filters are not installed.
- Do not use filters if they are damaged or not completely dry.
- Make sure that the air inlets are not blocked or dirty. Do not insert foreign objects into them.
- If the suction power of the appliance suddenly decreases during cleaning, immediately turn the appliance off, unplug the power cord and check if the telescopic tube is clogged. Remove the blockage and only then continue cleaning.
- Always unplug the appliance at the end of use, when cleaning or replacing filters, or when it breaks down.

### 03 INTENDED USE


---

The vacuum cleaner is designed for cleaning floor coverings, as well as for cleaning hard-to-reach surfaces, furniture, appliances, etc. in residential areas.

### 04 BEFORE USE

---

- Remove the appliance from its packaging and take the transportation elements off.
- Do not switch the appliance on immediately if you have brought it from the street in cold weather; in this case the appliance should be kept at room temperature for about two hours before switching it on.
- Make sure that the appliance is supplied as specified by the manufacturer and that all components of the appliance and the appliance itself have not been damaged during transportation. If the appliance is damaged or does not function, contact your retailer.
- Make sure that the mains voltage corresponds to the voltage specified in the technical data of the appliance.
- Insert the hose base (5) into the connector on the housing (6) until it clicks into place.

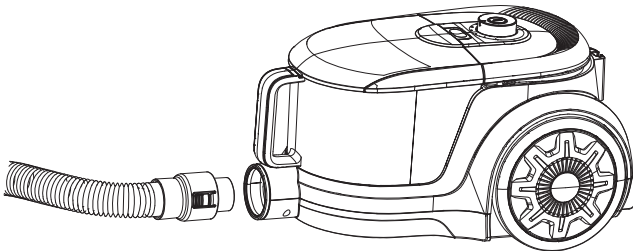


- Connect the hose handle (5) to the telescopic tube (3). Adjust the length of the telescopic tube.



- Install the nozzle you need.

Note: for convenience, you can attach the nozzle directly to the hose.

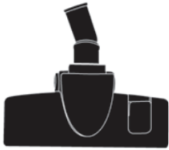

Floor brush

The floor nozzle is suitable both for carpets and smooth floors. With the foot switch, you can switch between a smooth floor and a carpet.



Crevice & Brush nozzle

Fold over the end piece to convert the crevice nozzle into a brush nozzle.

- The crevice nozzle is suitable for upholstery, cleaning the inside of cars and for all nooks and crannies that cannot be reached with the other nozzles.
- The brush nozzle is suitable for all uneven objects, furniture, lamps, profiles and skirting boards, window ledges, etc.



## 05 OPERATION

---

- Extend the power cord at least two-thirds of its length. The optimum length is between the yellow and red marks. The red mark on the power cord is the maximum length, do not extend the cord beyond this.
- Insert the plug into the power outlet.
- Press the power button (9) to start operation. Turn the button to adjust the suction power.
- You can also adjust the suction power by using the air slide (4) on the hose. When the opening is closed, the air is drawn in more forcefully, and when it is open, the air is drawn less forcefully.
- At the end of the cleaning, press the power button. Unplug the appliance.
- Press the power cord rewind button. Hold the cord with your hand to prevent twisting and damage to the cord

## 06 CLEANING AND MAINTENANCE


---

- Before cleaning, unplug the appliance and allow it to cool down.
- Wipe the body of the appliance with a damp cloth and allow it to dry.
- Do not use abrasive cleaners or organic solvents to clean the appliance.
- Do not immerse the appliance in water or turn the appliance on when it is wet.
- Check the filters and inlet opening for clogging. Clean the filters regularly.
- For easy storage, the hose can be detached from the vacuum cleaner body.

### Cleaning the dust cup


When the suction power decreases, the dust cup must be cleaned.

- Press the button to remove the dust container (8) and pull the cup upwards.
- Place the dust cup over the dustbin. Open the lid of the container and empty the dust into the bin.
- If necessary, wipe the dust cup with a damp cloth. Allow the cup to dry completely.
- Place the dust cup back into the vacuum cleaner.

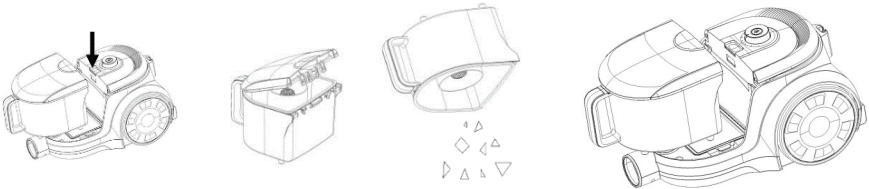


### Cleaning the internal filter

- Remove the dust cup.
- Remove the internal filter from the holder.
- Rinse the internal filter under running water at room temperature (max. 40 °C).
- Let the filter dry completely (approximately 24 hours at room temperature).
- Put the filter back into the vacuum cleaner and replace the dust cup.

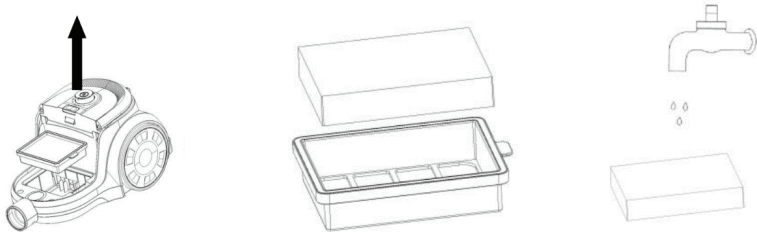

### Cleaning the external HEPA filter

- Remove the external HEPA filter by pressing the button (11) located on the back of the appliance.

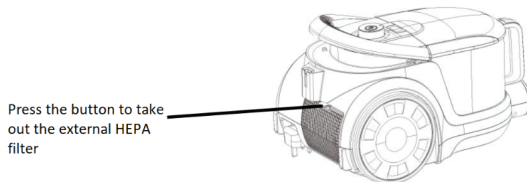

- Shake hard dust particles off the filter by gently tapping it against a hard surface. Remove fine dust particles with a soft brush.
- Rinse the filter under cool running water. Wait until it is completely dry (approximately 24 hours at room temperature).
- If necessary, wipe the filter installation place with a damp cloth.
- Put the filter back in the vacuum cleaner until it clicks.



### WARNING!

- Do not use the vacuum cleaner without the dust cup and filters.
- Do not install the dust cup and filters in the vacuum cleaner if they are not completely dry or damaged.
- Do not wash filters in a washing machine or dishwasher.
- Do not use hair dryers or heating appliances to dry the filters.

## 07 TROUBLESHOOTING

Problem	Possible cause	Solution
The appliance does not turn on.	The appliance is not connected to the mains.	Connect the appliance to the mains.
	The appliance is overheated from prolonged use.	Wait for the appliance to cool down completely and turn it on again.
	The appliance is damaged.	Contact an authorized service center.
The suction power of the appliance is insufficient or decreases during operation.	The dust cup is full.	Empty the dust cup.
	Filters, hose, telescopic tube or nozzle are clogged.	Clean or replace the filters. Remove any blockage in the hose, telescopic tube or nozzle.
Bad performance despite the appliance working properly.	The hose does not fit tightly enough on the telescopic tube.	Attach the hose tightly to the telescopic tube.
	The floor brush is in the wrong position.	Depending on the surface, change the position of the floor brush.



### WARNING!

Mechanical damage to the body, accessories and parts is not covered by the warranty.

## 08 TECHNICAL DATA

---

- Model: CRR332
- Power: 2000 W
- Suction power: 23 KPA
- Voltage: 240-220 V~, 50 Hz
- Capacity: 2,5 L
- Protection class: II
- °360 hose rotation
- External HEPA filter
- Net/Gross Weight: 6.4/5.5 KG
- Power cord length: 5 m
- Noise level: up to 78 dB
- Color: grey graphite/titan

## PARTS LIST

- Vacuum cleaner
- Telescopic tube
- Hose
- Floor brush
- 2 in 1 nozzle
- Instruction manual

## 09 TRANSPORT AND STORAGE

---

- Store the appliance in a clean, closed, dry room at an ambient temperature between 5 and 40 °C and a relative humidity of no more than 70 %.
- Transportation of the device can be carried out by all means of transport, in accordance with the rules for the carriage of goods. When transporting in the original packaging, protect the appliance from damage, preventing the exposure to precipitation and aggressive environments.
- When transporting the appliance without original packaging, use bubble wrap and corrugated cardboard packaging. Wrap each element of the appliance in a film and place it vertically in the container. The free distance between the elements of the product must be laid with air bubble wrap or folded cardboard.

## 10 DISPOSAL

---



To protect the environment, do not dispose of appliance and the batteries with household waste. Bring the appliance and batteries to specialized points for further disposal. For more information on the disposal of this product, contact your local authority, your household waste disposal service, or the retailer.

## **11 WARRANTY**

---

Organization for warranty service and acceptance of claims:

## 12 ADDITIONAL INFORMATION

---

**Manufacturer:** CARRERA GLOBAL FZCO

**Address:** DSO-IFZA19795-, IFZA Properties, Dubai Silicon Oasis, UAE

Made in China

Importer/Manufacturer's authorized company:

There are no special conditions for the sale.

The date of manufacture is indicated (coded) on the device, where the 1st and 2nd digits from the beginning are the month of manufacture; the next 4 digits are the year of manufacture.

The product is certified, meets the requirements:

TR TS 2011/004 "On the safety of low-voltage equipment",

TRTS 2011/020 "Electromagnetic compatibility of technical means"

TR EAEU 2016/037 "On the restriction of the use of hazardous substances in products of electrical engineering and radio electronics".



# ***CARRERA***

---

DESIGNED IN GERMANY

[www.carrera.de](http://www.carrera.de)